



THUNDER CHICKEN BY Q™

SPECS:	CALIBER	7.62 NATO / 300 BLK / 300 WM	LENGHT	8.1 in
	MOUNT	Quickie™ Fast-Attach	DIAMETER	1.75 in
	MATERIAL	Titanium	WEIGHT	14.7 oz

TRASH PANDA BY Q™

SPECS:	CALIBER	7.62 NATO / 300 BLK / 300 WM	LENGHT	6.9 in
	MOUNT	Quickie™ Fast-Attach	DIAMETER	1.75 in
	MATERIAL	Titanium	WEIGHT	11.8 oz

CHERRY BOMB™ FAST-ATTACH MUZZLE BRAKE BY Q™


SPECS:	THREAD	1/2-28 or 5/8-24	LENGHT	1.6 in
	MATERIAL	17-4 SS	WEIGHT	2 oz

- MORE LAWYER SHIT:**
- BEFORE USING THIS SILENCER: BE CERTAIN YOU HAVE READ AND UNDERSTAND THIS MANUAL AND THE ACCOMPANYING “FINE PRINT” SHEET. FAILURE TO DO SO CAN RESULT IN SERIOUS INJURY AND/OR PROPERTY DAMAGE. USE EXTREME CARE AND CAUTION WHEN HANDLING ANY FIREARM AND SILENCER.
 - THE THUNDER CHICKEN & TRASH PANDA SILENCERS ARE FOR USE WITH 7.62MM OR SMALLER PROJECTILES.
 - ONLY USE FACTORY CERTIFIED SAAMI/C.I.P. AMMUNITION WITH THIS SILENCER by Q.

- ASSEMBLY**
- BEFORE PERFORMING ANY MAINTENANCE ON YOUR FIREARM, REMOVE THE MAGAZINE FROM YOUR FIREARM, MAKE SURE THE ACTION IS OPEN AND THE FIREARM IS UNLOADED BY PERFORMING A PHYSICAL AND VISUAL INSPECTION OF THE CHAMBER AND MAGAZINE WELL.
 - AS WITH ALL FIREARMS CLEANING AND MAINTENANCE, ALWAYS WEAR PROPER PERSONAL PROTECTIVE EQUIPMENT.

DO NOT THREAD THE CHERRY BOMB INTO THE SILENCER BEFORE IT IS PROPERLY INSTALLED ONTO A BARREL. IT WILL GET STUCK.

- 1.Remove any muzzle devices from your host firearm.
 - 2.Clean & degrease muzzle threads with solvent.
- DO NOT USE STEEL TOOLS FOR CLEANING. WE RECOMMEND USING A PIECE OF SOLVENT-MOISTENED SCOTCH-BRITE™ OR A BRASS OR NYLON BRUSH.**
- 3.Apply a few drops of Rocksett thread lock to the barrel threads. (ROCKSETT NOT NEEDED ON BARREL WITH TAPERED SHOULDER.
 - 4.Right tighty. The Cherry Bomb features 1/2 inch SAE wrench flats on the front.
- PRO TIP: IF YOUR BARREL IS THREADED 5/8-24, USE THE 5/8-24 CHERRY BOMB. IF IT’S 1/2-28, USE THE 1/2-28 CHERRY BOMB.**
- 5.Using a 1/2 inch socket, tighten the Cherry Bomb clockwise onto your host firearm to 20-30 ft lbs.

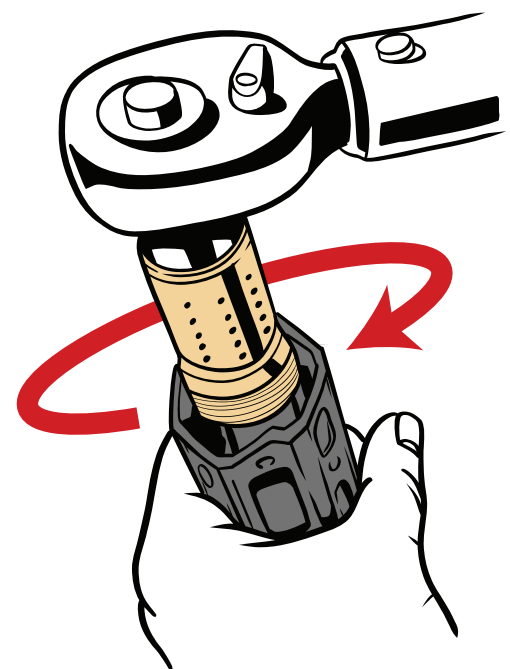


DO NOT USE WASHERS, SHIMS, OR JAM NUTS WHEN INSTALLING THE CHERRY BOMB ONTO THE HOST BARREL. THEY CAN CAUSE MISALIGNMENT AND THE CHERRY BOMB DOES NOT REQUIRE TIMING.


- ASSEMBLY:**
- Well, that was easy.



- SILENCER INSTALLATION:**
- 1.Righty tighty. The Thunder Chicken and Trash Panda silencers feature 1 inch SAE flats on the rear. We recommend you use these for install and removal. They also feature 3/4 SAE flats on the front for silencers installed under a handguard.
 - 2.Tighten clockwise onto the Cherry Bomb to 10-15 ft lbs.
- DO NOT USE THREAD LOCK WHEN INSTALLING A QUICKIE FAST-ATTACH SILENCER TO THE CHERRY BOMB MUZZLE BRAKE.**

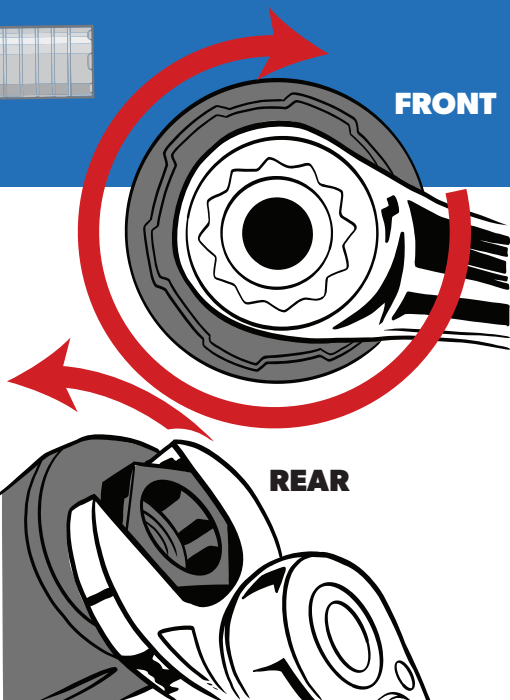

- REMOVAL:**
- BEFORE REMOVING ANY SILENCER FROM ITS HOST, REMOVE THE MAGAZINE FROM YOUR FIREARM, MAKE SURE THE ACTION IS OPEN AND THE FIREARM IS UNLOADED BY PERFORMING A PHYSICAL AND VISUAL INSPECTION OF THE CHAMBER AND MAGAZINE WELL.
 - IF YOU JUST FINISHED SHOOTING, I’D WAIT A MINUTE... THAT SHIT GETS HOT.
- 1.Lefty loosey.
 2. You’re done.

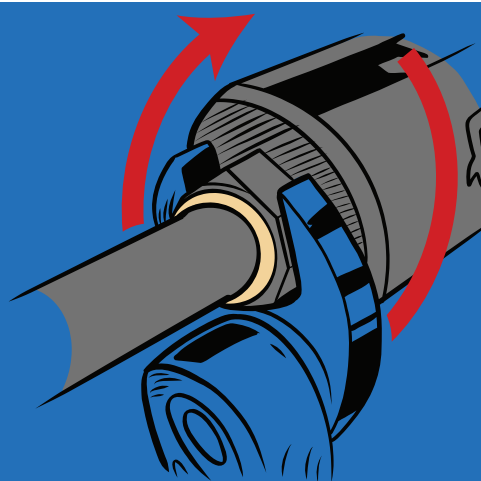

- CLEANING & MAINTENANCE:**
- A CENTERFIRE RIFLE SILENCER DOES NOT REQUIRE THE SAME CLEANING AND MAINTENANCE AS A RIMFIRE OR PISTOL SILENCER DUE TO THE HIGHER PRESSURES AND TEMPERATURES OF THE CARTRIDGES.
 - AS WITH ALL FIREARMS CLEANING AND MAINTENANCE, ALWAYS WEAR PROPER PERSONAL PROTECTIVE EQUIPMENT.
- 1.Clean the Cherry Bomb’s taper / shoulder and threads as well as the corresponding silencer features of any fouling. This will help with alignment of the silencer to the barrel’s axis, ensuring optimal performance.
 - 2.If you wish to clean this silencer, we recommend submerging it in a copper solvent or an ultrasonic cleaner.
 3. When removed from its liquid bath, rinse and make sure the silencer is fully drained before firing.
- DO NOT USE STEEL TOOLS FOR CLEANING. WE RECOMMEND USING A PIECE OF SOLVENT-MOISTENED SCOTCH-BRITE™ OR A BRASS OR NYLON BRUSH.**